


使用说明书

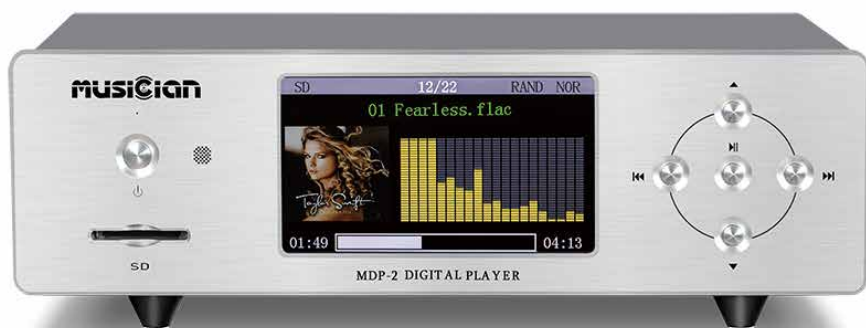

本说明适合本系列产品使用

感谢您购买我们的产品，使用前请仔细阅读此说明书

精美于型 完美于音



产品参数

在使用本产品之前，请仔细阅读本使用说明书，以确保正确的操作和安装。
阅读完本使用说明书之后，请务必妥善保管以便将来参考。

使用前，请首先确认下列附件是否齐全：

遥控器 1个 使用说明书 1本

性能参数

电源: AC115V/AC230V。手动切换

消耗功率: 8W

尺寸(宽x深x高):

265mm*76mm*236mm净重: 3.36KG

工作温度: -10℃~40℃

工作湿度: 10~90%

电源频率: 50Hz/60Hz

总谐波失真: 0.0005%

数字同轴输出特性: S/PDIF标准

显示部分: 4.3寸液晶显示屏

播放功能: SD卡和U盘

1.支持的文件 格式:

WAV (44.1-384KHZ、16-32bit)

APE (44.1-384KHZ、16-32bit C1 C2 C3级别) (48KHZ、16-32bit C4级别)

FLAC (44.1-192KHZ、16-32bit 1~8级别)

MP3 (48KHZ、16bit , 64Kbps~320Kbps, CBR、VBR)

DSD (DSF、DFF、ISO) 2.822MHZ\5.644MHZ、DSD64\DSD128\DSD256

支持U盘2.0\3.0版本, SD卡SDHC C4级别

2.支持U盘、SD卡

支持U盘2.0\3.0版本以上, SD卡: 支持SDHC C4级别以上。


3.支持断电记忆播放功能。

4.支持英文、简体、繁体文件列表和歌曲名称显示。

5.支持用户自行升级程序。


面板功能介绍

正面

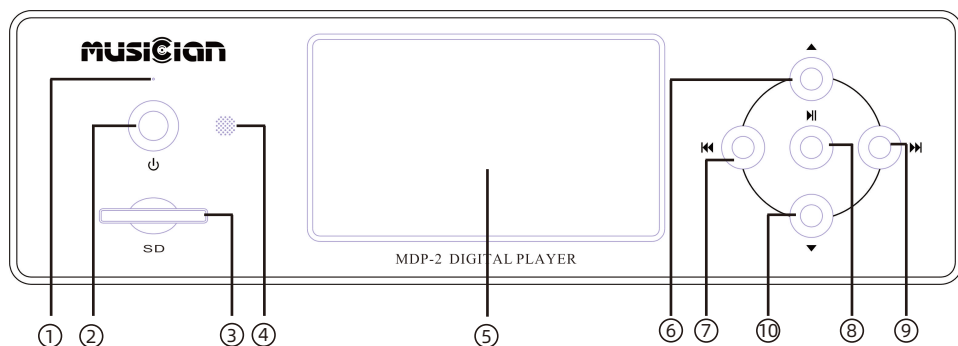


- | | |
|----------|------------------|
| ① 待机指示灯 | ⑥ 播放列表/列表向上 |
| ② 电源开关 | ⑦ 上一曲/长按1秒为快退键 |
| ③ SD卡插口 | ⑧ 播放/确认/长按1秒为设置键 |
| ④ 红外线接收孔 | ⑨ 下一曲/长按1秒为快进键 |
| ⑤ 显示屏 | ⑩ 文件列表/列表向下 |

后面板

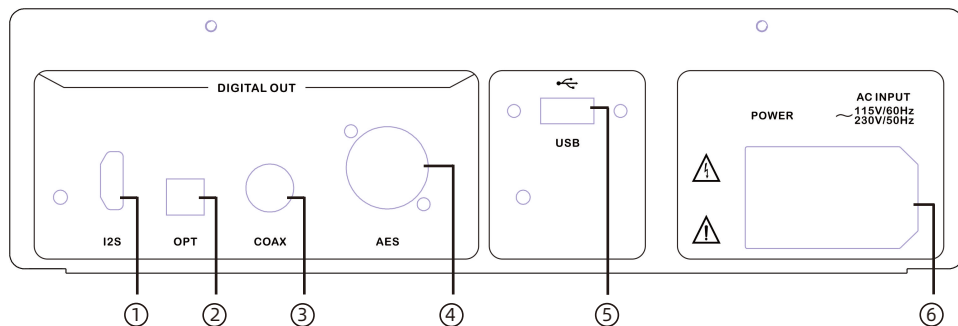

- | | |
|----------|---------|
| ① I2S接口 | ④ AES接口 |
| ② OPT接口 | ⑤ USB接口 |
| ③ COAX接口 | ⑥ 电源插座 |

遥控器示意图

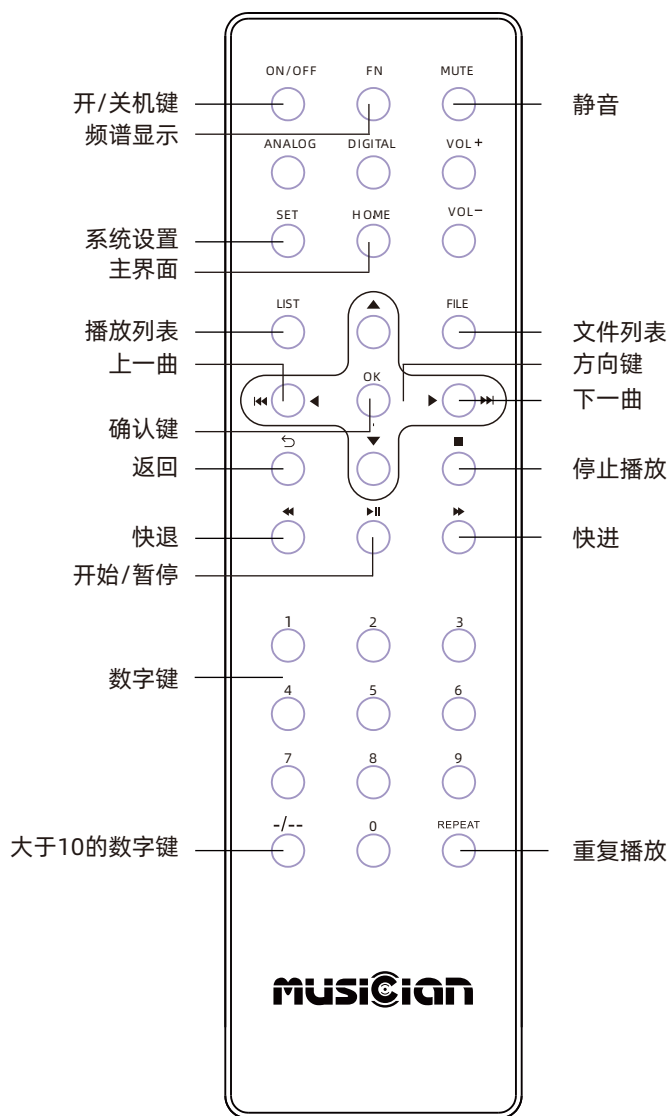

备注：电池规格CR2032纽扣3V电池，需用户自己取下后盖板，将电池放进电池盒中（注意电池极性，不可装反），再将后盖按照上述方法装回即可，旧电池不可乱扔乱放，以免污染环境。

快速操作入门

确定已插入U盘或SD卡，并接上电源然后按下电源开关按钮开机（显示开机LOGO），约2秒钟后进入主界面自动搜索U盘或SD卡并自动开始播放，U盘默认搜索播放列表或SD卡默认搜索播放列表的歌曲。

快速添加自己喜欢的曲目到自定义播放列表，操作如下：

在主界面按遥控器上的“FILE”键进入文件列表界面如图2

如果显示“No Found!没有找到U盘或SD卡”

按▲或▼选择U盘或SD卡，选好后按▶键即可进入对应的U盘或者SD卡里找浏览音频文件如图3

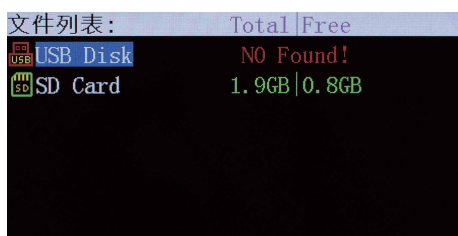


图2 文件列表界面

按▲或▼选择要播放文件选定后按下OK键或▶||键即可播放选中的曲目，（按▶键进入目录，按◀键返回到上一层目录）



[提示：如果按下OK键是添加到播放列表中，如果按下“▶||”键是立即播放当前选中的歌曲此操作也可以针对文件夹会自动播放文件夹里所有的音频文件]



图3 U盘（SD卡）里面的文件内容

此时按下“HOME”键回到主界面

快速操作入门

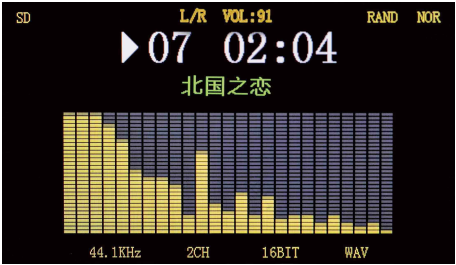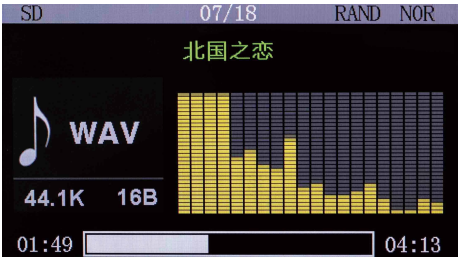

以上两种界面可以按遥控器上的“HOME”键来回切换。

.....

在主界面按遥控器上的“LIST”键进入播放列表如图4：按▲或▼选择播放列表中的歌曲，选定后按下OK键或“▶||”键即可播放选中的曲目。


SD卡文件夹播放列表：

01	伴遊-陳奕迅.wav
02	陈百强 - 偏偏喜欢你.wav
03	陈奕迅 - 富士山下.mp3
04	迪克牛仔 - 有多少爱可以重来.wav
05	婚礼的祝福-陈奕迅.wav
06	林志炫 - 蒙娜丽莎的眼泪.wav
07	刘若英 - 后来.wav
08	莫文蔚 - 盛夏的果实.wav
09	孙耀威 - 爱的故事(上集).flac

图4播放列表

详细使用介绍

主界面

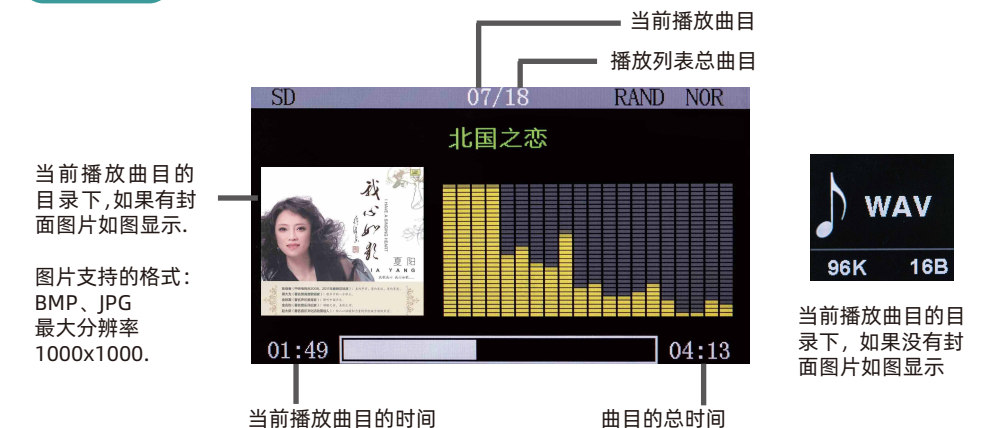

SD: 使用SD卡播放
USB: 使用U盘播放





以上频谱显示开启与关闭可以按遥控器上的“FN”键来回切换。

主界面中可以直接通过“◀◀” “▶▶” 向前或向后1首曲目,也可以用数字按键选曲,操作如下:

1. 歌曲1-9可以直接按数字键;
2. 歌曲10~99,则按下“-/---”,屏幕出现“__”闪烁时,按下对应的曲目即可播放;
3. 歌曲100~999,则按2次“-/---”键,屏幕出现“---”闪烁,按下对应的曲目即可播放。
4. 例如:播放第27首时,按1次“-/---”键,再按数字“2”键,再按数字“7”键即可进行播放列表中的第27曲目。

文件浏览界面介绍

在主界面中按遥控器上“FILE”键或按面板上“▼”键即可进入文件列表界面

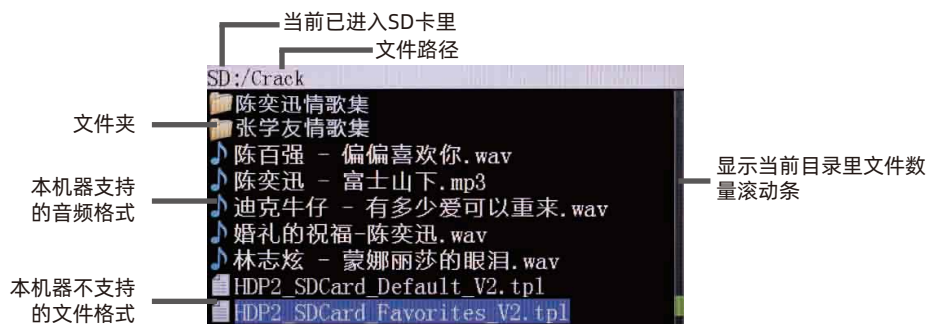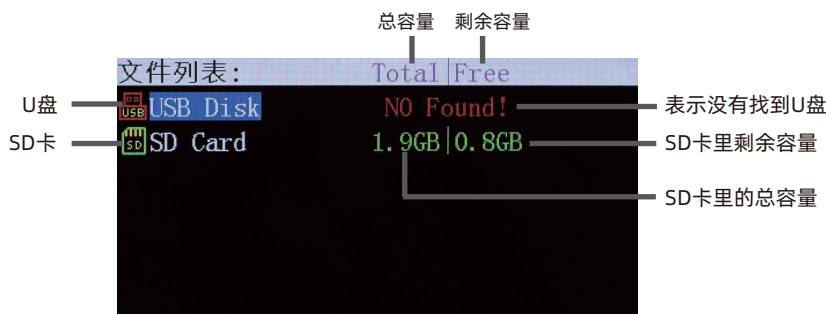


提示：本机器支持的音频文件会显示为这个图标 “🎵”，否则会显示 “📄”。

此时如果需要返回上一层文件夹，则可以按遥控器上的“↶”键或面板上的“⏮”键如果要立即播放当前选中的曲目或文件夹，则按下遥控器上的“▶”键马上进行播放。

在以上界面中可以通过遥控或面板上“▲”“▼”键来回选择对应的文件然后按下遥控器上的“OK”键或面板上“▶”键即可播放选中的曲目，同时把该文件夹所有的曲目添加到文件夹播放列表中（提示：该操作也可以直接对文件夹操作把文件夹目录下的音频文件添加到文件夹播放列表中）。

详细使用介绍

在浏览文件的时候，如果选择中音频文件后，继续按向右键，会出现如下界面

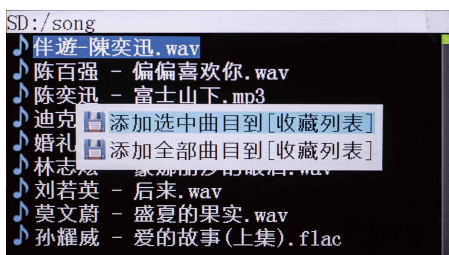


根据界面的提示操作：可添加选中自己喜欢的曲目到收藏播放列表

播放列表界面介绍

在主界面中按遥控器上“LIST”键或按面板上“▲”键即可进入播放列表界面

[提示：播放列表最多只能添加1000首歌曲]

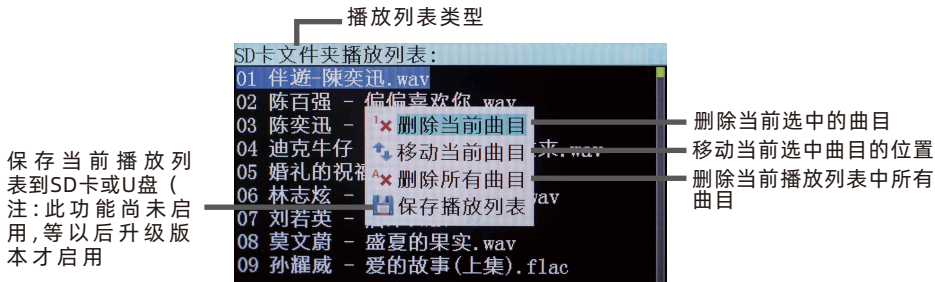

在以上界面中可以通过遥控或面板上“▲”“▼”键来回选择对应的曲目，然后按下遥控器上的“OK”键或面板上“▶||”键即可播放。（提示：长按遥控器或面板上“▲”和“▼”键1秒钟后，可以自动连续翻滚）。

播放列表类型介绍


默认搜索播放列表——机器自动搜索SD卡或U盘里面所有歌曲生成的默认搜索播放列表

文件夹播放列表——用户在文件夹中直接选择单1曲目播放并同时把该文件夹里所有曲目的添加到文件夹播放列表




收藏播放列表——用户在文件夹中添加选中喜欢的曲目到收藏列表时生成的收藏播放列表

系统设置界面介绍

在主界面中按遥控器上的“SET”键即可进入系统设置界面

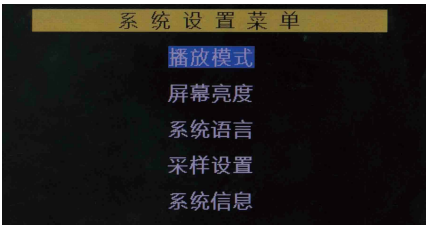

在此界面中可以通过遥控或面板上“▲”和“▼”键来回选中对应的功能，然后按下遥控器上的“OK”键或面板上“▶||”键即可进入对应的功能。

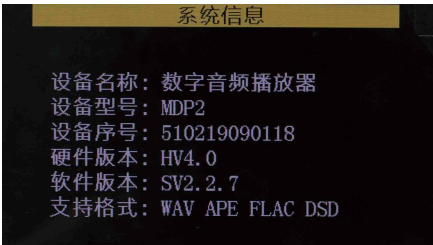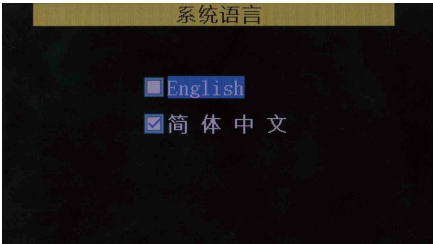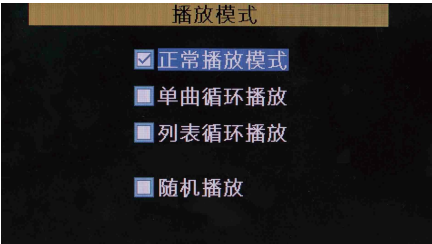

在这些界面中可以通过遥控“↶”或面板上“◀◀”键返回到系统设置菜单。

在以上所有界面中可以通过遥控器上“HOME”键返回到主界面

常见问题解决

1. 播放时出现断音、杂音、沙音现象，请重新格式化U盘或SD卡。
2. 播放高码流音频如96K、24bit、192K、24bit出现断音或重音现象请检查U盘或SD卡的传输速度是否足够。例如更换标志2.0的U盘或C4级别以上的SD卡。

musician

音 乐 家

User's Manual



This description is suitable for this series of products
Thank you for purchasing our products, please read
this manual carefully before use

Exquisite in shape, Perfect in sound



Product Parameter

Before using this product, please read this manual carefully to ensure correct operation and installation.

After reading this instruction manual, please keep it in a safe place for future reference.

Before use, please confirm whether the following accessories are complete:

Remote control *1 User's Manual *1

Performance Parameter

Power supply: AC115V/AC230V. Manual switch

Power consumption: 8W

Dimensions (WxDxH):

265mm*76mm*236mm Net weight:

3.36KG

Working temperature: -10°C~40°C

Working humidity: 10~90%

Power frequency: 50Hz/60Hz

Total harmonic distortion:

0.0005%

Digital coaxial output

characteristics: S/PDIF standard

Display part: 4.3 inch LCD screen

Play function: SD card and U disk

1. Supported file format:

WAV (44.1-384KHZ、16-32bit)

APE (44.1-384KHZ、16-32bit C1 C2 C3Level) (48KHZ、16-32bit C4Level)

FLAC (44.1-192KHZ、16-32bit 1~8Level)

MP3 (48KHZ、16bit , 64Kbps~320Kbps, CBR、VBR)

DSD (DSF、DFF、ISO) 2.822MHZ\5.644MHZ、DSD64\DSD128\DSD256 Support U disk 2.0\3.0 version, SD card SDHC C4 Level

2. Support U disk, SD card

Support U disk 2.0\3.0 version and above, SD card: support SDHC C4 level and above.


3. Support power-off memory playback function.

4. Support English, simplified, traditional file list and song name display.

5. Support users to upgrade the program by themselves.


Panel function introduction

Front

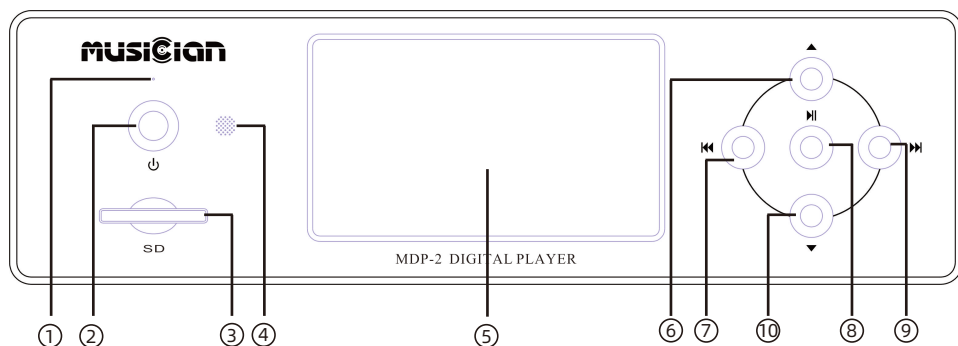


- | | |
|---------------------------|--|
| ① Standby indicator | ⑥ Playlist/list up |
| ② Power switch | ⑦ Previous song/Long press for 1 second to rewind |
| ③ SD card socket | ⑧ Play/Confirm/Long press for 1 second as the setting button |
| ④ Infrared receiving hole | ⑨ Next song/long press 1 second as fast forward button |
| ⑤ Display screen | ⑩ File list/list down |

Back panel

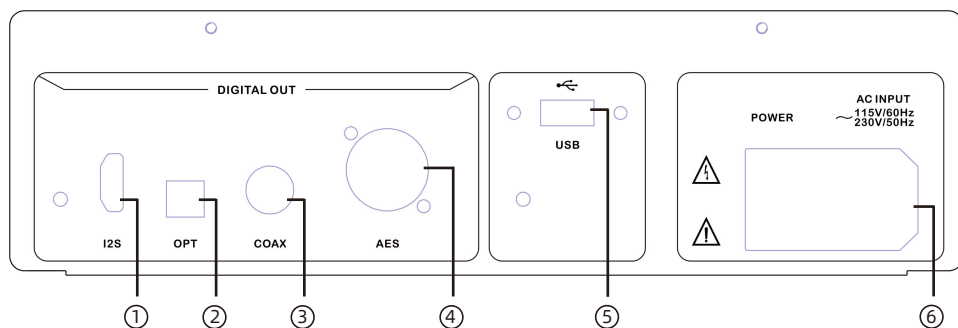

- | | |
|------------------|-----------------|
| ① I2S interface | ④ AES interface |
| ② OPT interface | ⑤ USB interface |
| ③ COAX interface | ⑥ Power socket |

Schematic diagram of the remote control

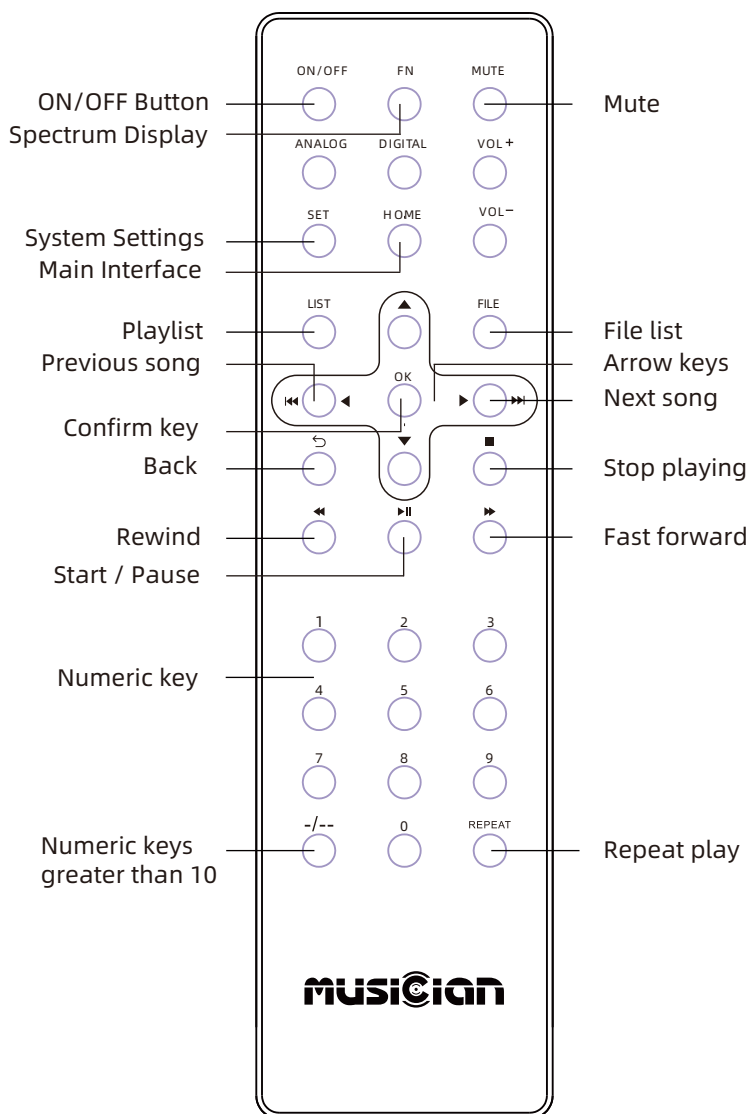

Note: the battery specification is CR2032 button 3V battery. The user needs to remove the rear cover, put the battery into the battery box (pay attention to the battery polarity, do not install it upside down), and then install the rear cover according to the above method. The old battery cannot be thrown around to avoid polluting the environment.

Introduction to quick operation

Confirm that the USB flash disk or SD card has been inserted and connected to the power supply, and then press the power switch button to start the machine (display the startup logo). After about 2 seconds, enter the main interface to automatically search for the USB flash disk or SD card and automatically start playing. The USB flash disk searches the playlist by default or the SD card searches the songs in the playlist by default.

Quickly add your favorite tracks to the custom playlist, as follows:
In the main interface, press the "file" key on the remote control to enter the file list interface. As shown in Figure 2

If "no found! USB flash disk or SD card not found "
Press ▲ or ▼ to select USB flash disk or SD card. After selection, ► press the key to enter the corresponding USB flash disk or SD card to find and browse audio files, as shown in Figure 3

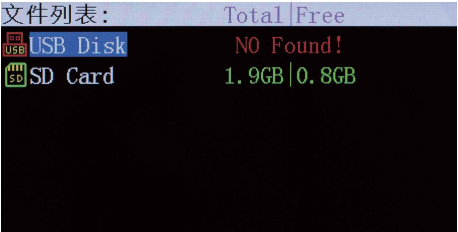


Figure 2 File list interface

Press ▲ or ▼ to select the file to be played, and then press OK or ►|| to play the selected track (press ► to enter the directory, and press ◀ to return to the previous directory)

[Hint: If you press the OK button, it will be automatically added to the playlist, if you press the "►||" button, it will play the currently selected song immediately. This operation can also automatically play all the audio files in the folder for the folder]



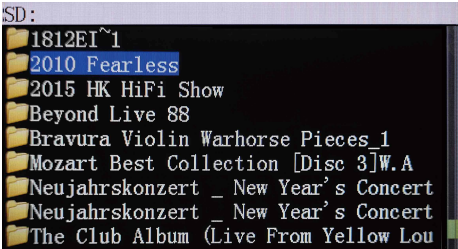


Figure 3 File content in the U disk (SD card)

At this time, press the "HOME" key to return to the main interface

Introduction to quick operation

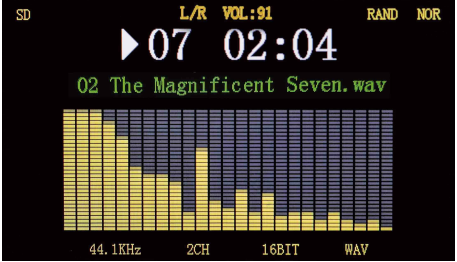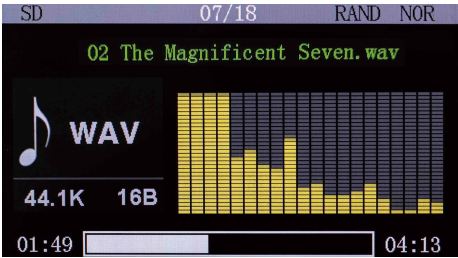

The above two interfaces can be switched back and forth by pressing the "HOME" key on the remote control.

.....

In the main interface, press the "LIST" button on the remote control to enter the playlist as shown in Figure 4: Press ▲ or ▼ to select a song in the playlist, and then press the OK button or the "▶||" button to play the selected track.

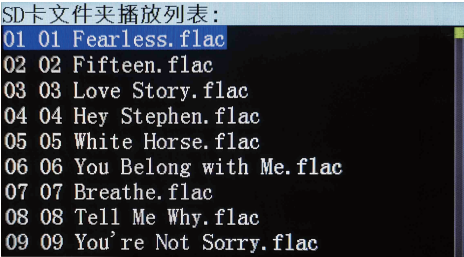




Figure 4 Playlist

Detailed introduction

Main interface

Under the directory of the currently playing track, if there is a cover picture, it will be displayed as shown in the figure.

Picture supported formats: BMP, JPG
The maximum resolution is 1000x1000.

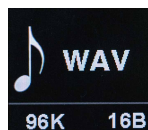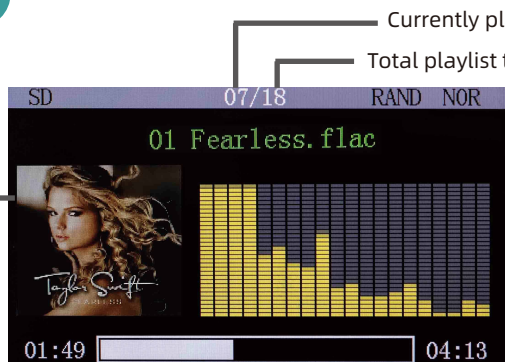

If there is no cover picture in the directory of the currently playing track, it is shown as shown in the figure

The time of the currently playing track

Total song time

SD: play with SD card

USB: play with USB flash drive

Rand: random playlist track

Name of currently playing song

(Note: long file name will be automatically scrolled)

Album name and singer name of current song

(Note: only album and singer names in cue file are supported)



The above spectrum display can be switched back and forth by pressing the "FN" key on the remote control.

Playback mode (can be set through "↔" on the remote control or in system settings):
Nor: the track of the playlist stops automatically after playing


Rep: repeat a single track
All: repeat all tracks in the playlist

In the main interface, you can directly use "◀◀" "▶▶" to move forward or backward one track, or you can use digital keys to select music. The operations are as follows:


1. For songs 1-9, you can directly press the number key;
2. If the song is 10 ~ 99, press "-/--" and when "--" flashes on the screen, press the corresponding track to play;
3. If the song is 100 ~ 999, press the "-/--" key twice, and the "---" flashes on the screen. Press the corresponding track to play.
4. For example, when playing the 27th track, press the "-/--" key once, then press the number "2" key, and then press the number "7" key to play the 27th track in the playlist.

File browsing interface

In the main interface, press the "file" key on the remote control or the "▼" key on the panel to enter the file list interface

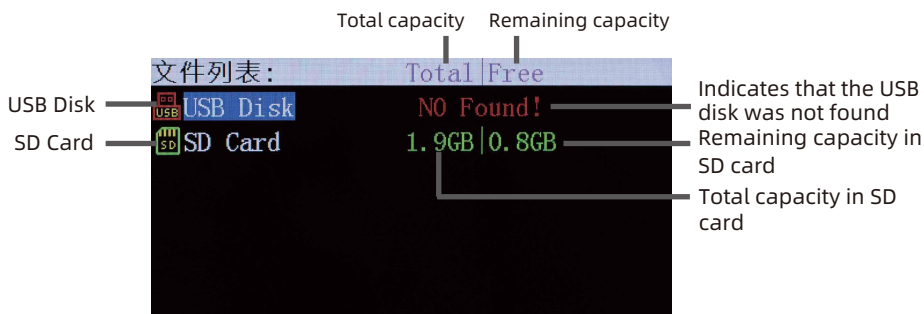

.....

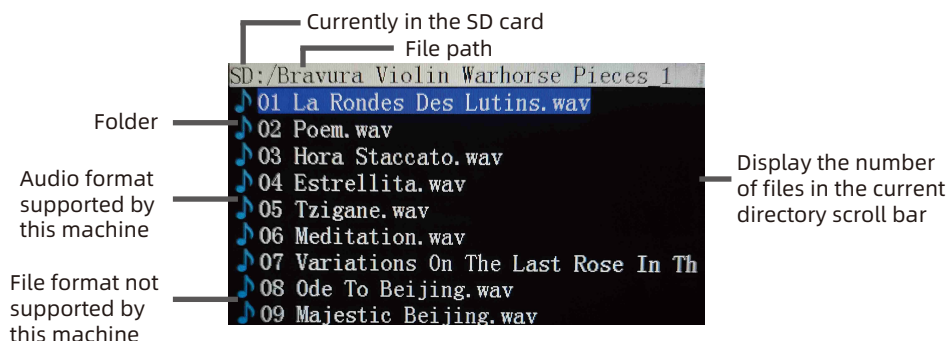

Tip: The audio files supported by this machine will be displayed as this icon "🎵", otherwise it will display "📄".

If you need to return to the previous folder at this time, you can press the "↶" button on the remote control or the "⏮" button on the panel. If you want to play the currently selected track or folder immediately, press the "▶" button on the remote control Play it right away.


.....

In the above interface, you can use the remote control or the "▲" "▼" keys on the panel to select the corresponding file back and forth.

Then press the "OK" button on the remote control or the "▶||" button on the panel to play the selected track, and at the same time add all the tracks in the folder to the folder playlist (Tip: This operation can also directly affect the file The folder operation adds the audio files in the folder directory to the folder playlist).

Detailed introduction


When browsing files, if you continue to press the right arrow after selecting the middle audio file, the following interface will appear

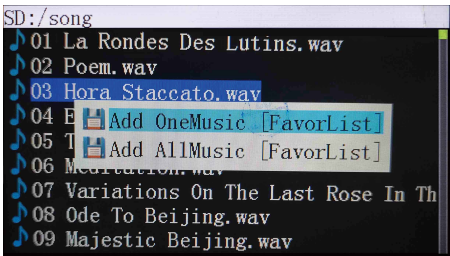

Operate according to the prompts on the interface: you can add and select your favorite tracks to the favorite playlist

Playlist interface

In the main interface, press the "LIST" button on the remote control or press the "▲" button on the panel to enter the playlist interface [Hint: You can only add up to 1000 songs in the playlist]

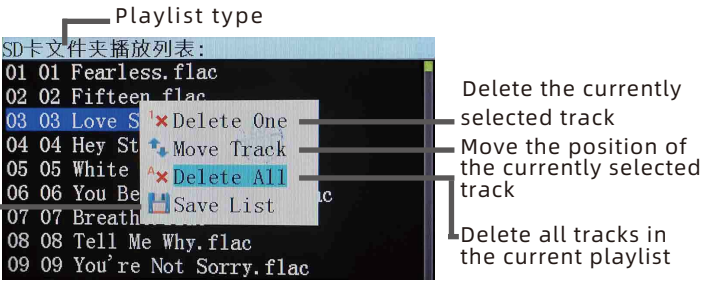

Save the current playlist to SD card or U disk (Note: This function has not been enabled yet, it will be enabled only after the upgrade version later)

In the above interface, you can use the remote control or the "▲" "▼" keys on the panel to select the corresponding track back and forth, and then press the "OK" key on the remote control or the "▶||" key on the panel to play. (Reminder: Long press the "▲" and "▼" keys on the remote control or the panel for 1 second, it can automatically and continuously roll over).

Playlist type


Default search playlist-the machine automatically searches the default search playlist generated by all songs in the SD card or U disk

Folder playlist-the user directly selects a single track in the folder to play and adds all the tracks in the folder to the folder playlist at the same time




Favorite playlist-the favorite playlist generated when the user adds the favorite track to the favorite list in the folder

System setting interface

In the main interface, press the "SET" button on the remote control to enter the system setting interface

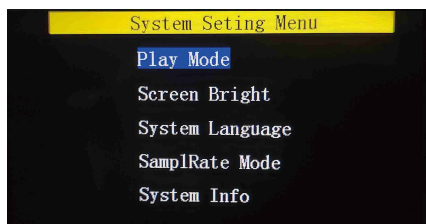

In this interface, you can select the corresponding function through the remote control or the "▲" and "▼" keys on the panel, and then press the "OK" key on the remote control or the "▶||" key on the panel to enter the corresponding function.

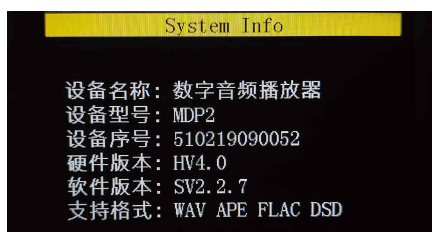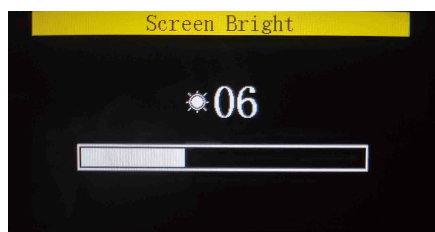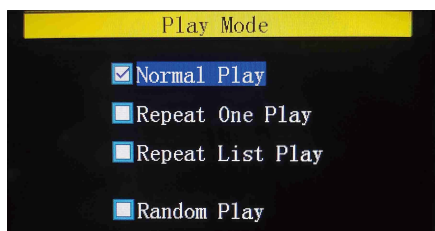

In these interfaces, you can return to the system setting menu through the remote control "↶" or the "◀◀" key on the panel.


In all the above interfaces, you can return to the main interface through the "HOME" key on the remote control

Common problem solving

1. Interrupted sound, noise, or rustling occurs during playback, please reformat the U disk or SD card.
2. When playing high-stream audio, such as 96K, 24bit, 192K, 24bit, the sound is interrupted or accented. Please check whether the transmission speed of the U disk or SD card is sufficient. For example, replace the U disk with the logo 2.0 or the SD card above the C4 level.

musician

取扱説明書

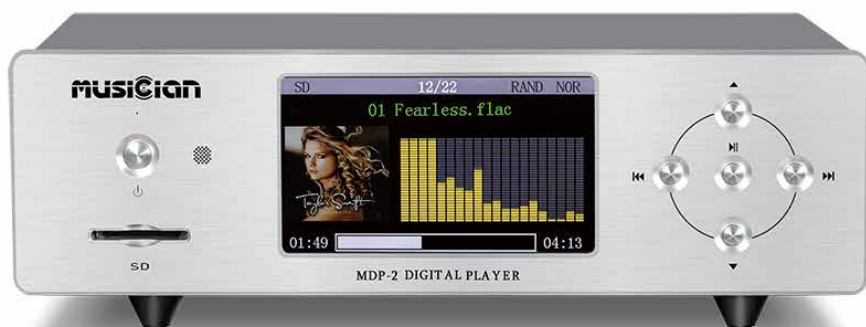

この説明は、このシリーズの製品に適しています。
弊社製品をお買い上げいただき、誠にありがとうございます。

絶 妙 な 形 ， 完 璧 な 音



製品パラメータ

正しい操作とインストールを保証にするために、本製品を使用する前に、この取扱説明書をよくお読みください。この取扱説明書をお読みになった後は、参照できるようによく保管してください。

使用する前に、次のアクセサリが揃っているかどうかを確認してください。

リモコン *1 ユーザーマニュアル *1

パフォーマンスパラメータ

電源: AC115V / AC230V。手動スイッチ

消費電力: 8W

サイズ (幅×奥行×高さ):

265mm * 76mm * 236mm

重量: 3.36KG

働く温度: -10℃~40℃

働く湿度: 10~90%

電源周波数: 50Hz / 60Hz

全高調波歪み: 0.0005%

デジタル同軸出力特性:

S / PDIF規格

表示部分: 4.3インチ液晶画面

再生機能: SDカードとUディスク

サポートされているファイル形式:

WAV (44.1-384KHZ、16-32bit)

APE (44.1-384KHZ、16-32bit C1 C2 C3レベル) (48KHZ、16-32bit C4レベル)

FLAC (44.1-192KHZ、16-32bit 1~8レベル)

MP3 (48KHZ、16bit, 64Kbps~320Kbps, CBR、VBR)

DSD (DSF、DFF、ISO) 2.822MHZ\5.644MHZ、DSD64\DSD128\DSD256\ディスク

2.0 \ 3.0バージョン、SDカードSDHCC4レベルをサポート

Uディスク、SDカードをサポートします。

Uディスク2.0 \ 3.0バージョン以上、SDカードをサポート: SDHC C4レベル以上をサポート。


電源オフメモリ再生機能をサポートします。

英語、簡体字中国語、繁体字中国語のファイルリストと曲名の表示をサポートします。

ユーザーが自分でプログラムをアップグレードできるようにサポートします。

前後パネルのご紹介

正面

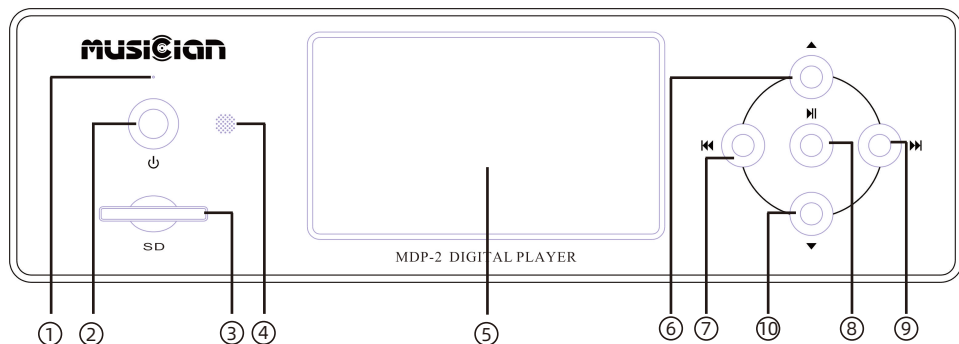

①スタンバイインジケータ

②電源スイッチ

③SDカードソケット

④赤外線受信ポート

⑤表示画面

⑥プレイリスト/リストアップ


⑦前の曲 / 1秒間の長押しで早戻し

⑧プレ/確認/1秒間の長押しでセットボタンになり

⑨次の曲 / 1秒間の長押しで早送り

⑩ファイル一覧 / リストダウン

リアパネル

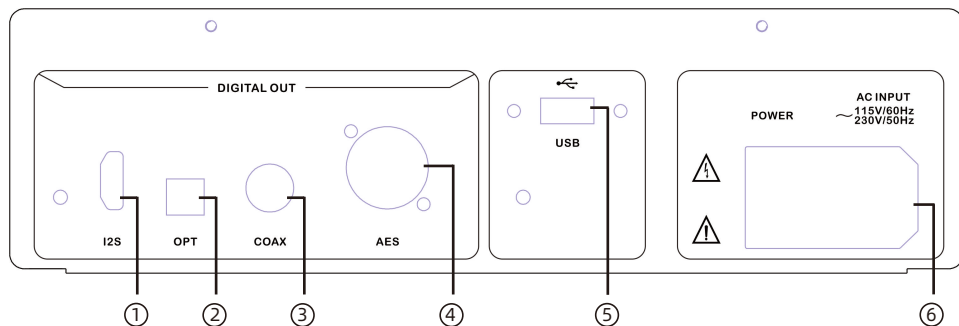

①I2Sインターフェース

②OPTインターフェース


③COAXインターフェース

④AESインターフェース

⑤USBインターフェース

⑥電源ソケット

リモコンの図解

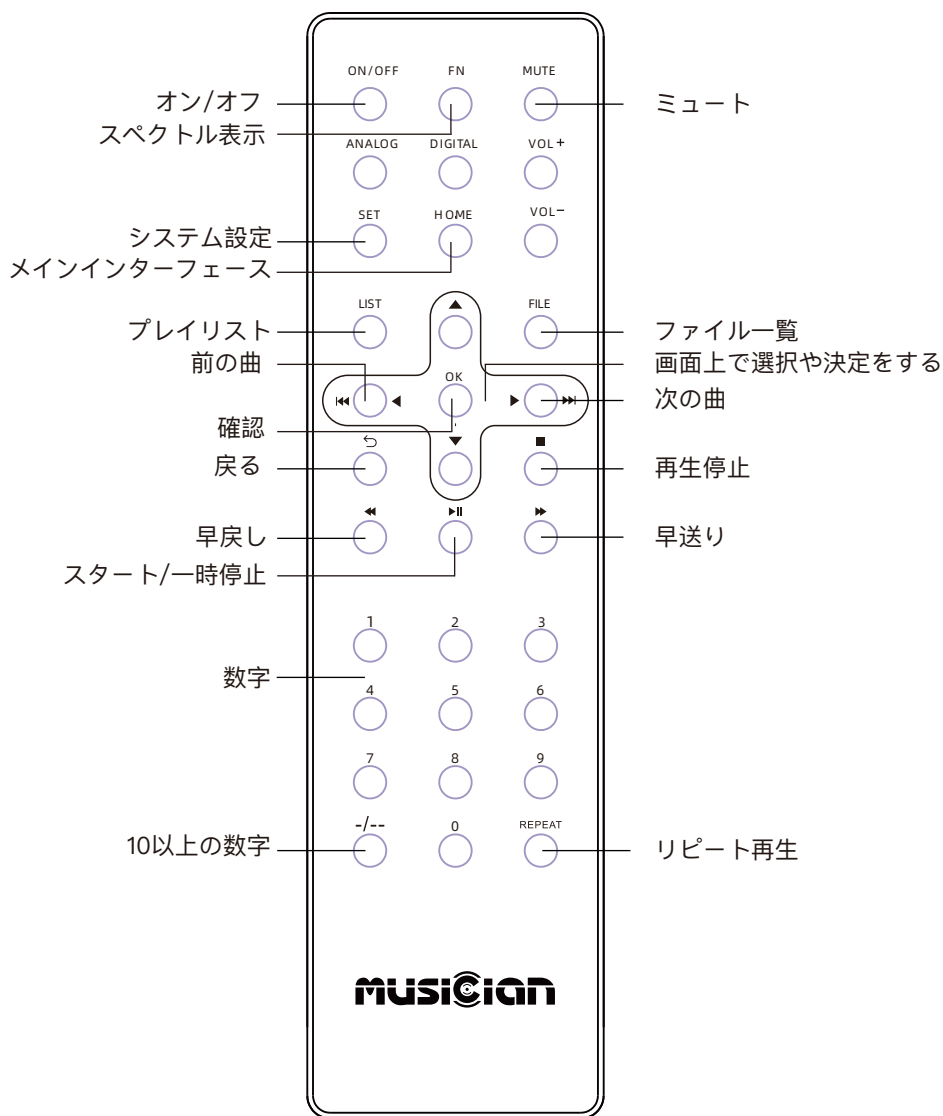

ご注意：電池の仕様はCR2032ボタン3V電池で、裏蓋を外して電池を入れる必要があります。電池の極性にご注意して、逆に取り付けしないでください。

操作方法

UディスクまたはSDカードを挿入してから電源を接続し、電源スイッチボタンを押して機器の電源を入れ、約2秒後にメインインターフェースに入ると、UディスクまたはSDカードが自動的に検索され、自動的に再生が開始されます（UディスクおよびSDカードは、デフォルトでプレイリスト内の曲を検索します）。

お気に入りの曲をカスタムプレイリストに追加するには、次のようにします。

メインインターフェースで、リモコンの「FILE」キーを押すと、図2に示すように、ファイルリストのインターフェースが表示されます。

画面に "No Found! No U disk or SD card found "

と表示された場合は、▲または ▼を押してUディスクまたはSDカードを選択し、▶を押して対応するUディスクまたはSDカードに入り、図3のようにオーディオファイルをブラウズします。

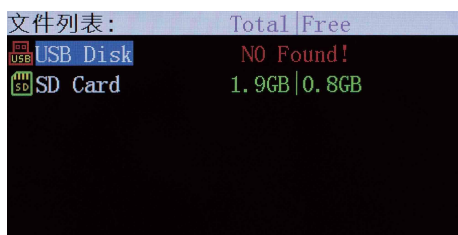


図2 ファイル一覧画面

▲ または ▼を押して再生するファイルを選択し、「OK」または ▶||を押して選択したトラックを再生します。▶を押してディレクトリに入り、◀を押して一つ上のディレクトリに戻ります。

ヒント: 「OK」ボタンを押すと、プレイリストにカスタム追加され、▶||ボタンを押すと、現在選択されている曲がすぐに再生されます。この操作はフォルダに対しても行うことができ、フォルダ内のすべてのオーディオファイルを自動的に再生します。

「HOME」ボタンを押して、メイン画面に戻る。



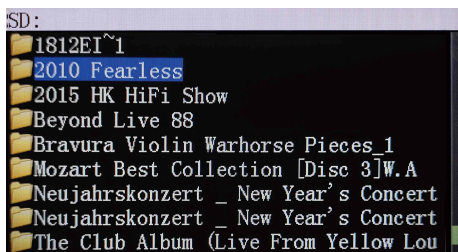


図3 Uディスク (SDカード) 内のファイルの内容

操作方法

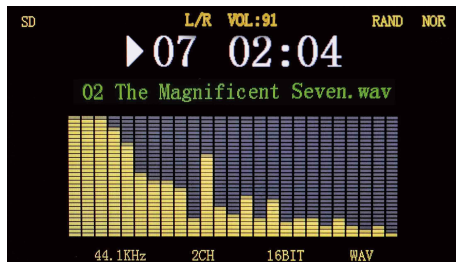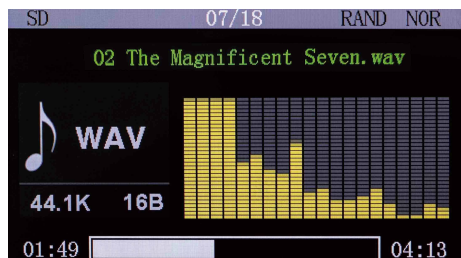

リモコンの「HOME」キーを押すと、上記の2つのインターフェースを切り替えることができます。

メインインターフェイスで、リモコンの[LIST]ボタンを押してプレイリストに入ります。

図4に示すように、▲ または ▼ を押してプレイリスト内の曲を選択し、次に「OK」または ► を押して選択した曲を再生します。

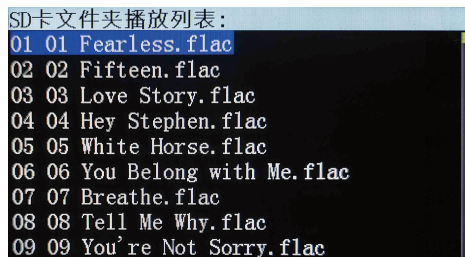


図4 プレイリスト

使用説明

主界面


現在再生中のトラックのディレクトリの下にカバー画像がある場合は、図のように表示されます。

画像でサポートされている形式：
BMP、JPG。最大解像度は1000x1000です。



再生中のトラック

プレイリストの総トラック数

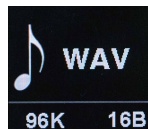

現在再生中のトラックのディレクトリで、カバー画像がない場合は、図のように表示されます。

SD: SDカードを使用して再生
USB: Uディスクを使用して再生

RAND: ランダムプレイリストトラック

現在再生中の曲の名前
(注: 長いファイル名は自動的にスクロールされます)

現在の曲のアルバム名とアーティスト名 (注: CUEファイル内のアルバム名とアーティスト名のみがサポートされています)



再生モード (リモコンの□で設定するか、システム設定で設定できます):

NOR: プレイリストのトラックが再生完了されると自動的に停止します

REP: 単一のトラックを繰り返します

ALL: プレイリスト内のすべてのトラックを繰り返します

上記のスペクトル表示は、リモコンの「FN」キーを押すことでオンとオフを切り替えることができます。

メインインターフェイス「◀◀」「▶▶」を使用して前のトラックまたは次のトラックを直接選択するか、数字ボタンを使用して音楽を選択できます。操作は次のとおりです。

曲1~9の場合、数字キーを直接押すことができます。



10~99曲の場合は、「-/-」を押し、画面に「__」が点滅したら、対応するトラックを選択して再生します。

100~999の曲の場合は、「-/-」ボタンを2回押すと、画面に「__」が点滅し、対応するトラックを押して再生します。

例: 27番目のトラックを再生するときは、「-/-」キーを1回押してから、数字の「2」キーを押してから、数字の「7」キーを押して、リストの27番目のトラックを再生します。

ファイルブラウザインターフェースのご紹介

メイン画面で、リモコンの「FILE」ボタンを押すか、パネルの" ▼ "ボタンを押して、ファイルリスト画面に入ります。

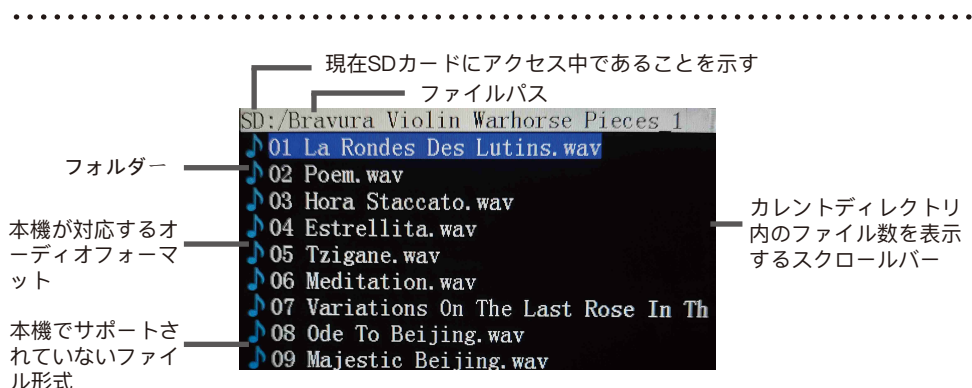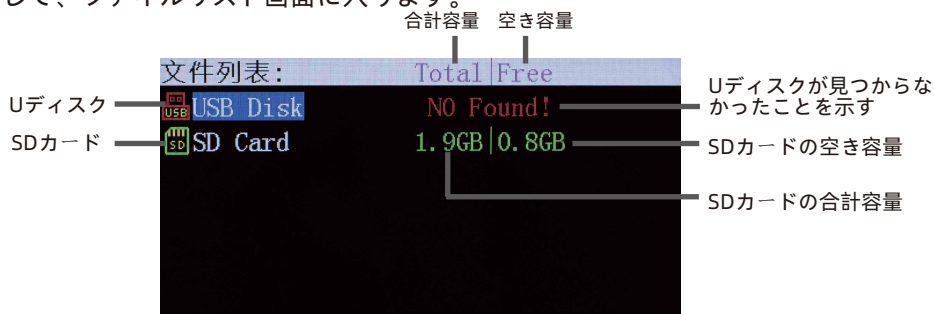

ヒント：本機が対応しているオーディオファイルは、このアイコン  が表示され、それ以外の場合は  が表示されます。

一つ上のフォルダに戻りたいときは、リモコンの ◀ ボタン、またはパネルの ◀◀ ボタンを押してください。現在選択されているトラックやフォルダーをすぐに再生したい場合は、リモコンの ▶ ボタンを押してください。


上記のインターフェースでは、リモコンやパネルの ▲ と ▼ ボタンを使って、対応するテキストを前後に選択することができます。

その後、リモコンの「OK」ボタンまたはパネルの ▶▶ ボタンを押すと、選択したトラックが再生されます。

また、フォルダ内のすべてのトラックをフォルダプレイリストに追加することもできます（ご注意：この操作は、フォルダ内のオーディオファイルをフォルダプレイリストに直接追加する場合にも使用できます。）

使用説明

ファイルを開覧しているときに、オーディオファイルを選択した後も右キーを押し続けると、次のインターフェイスが表示されます。

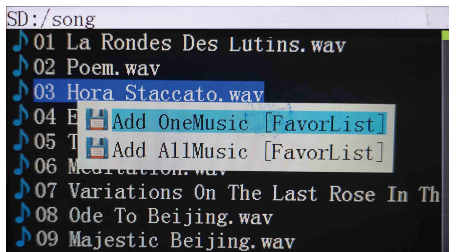

インターフェイスのプロンプトに従って操作します。お気に入りのプレイリストにお気に入りのトラックを追加して選択できます。

プレイリストインターフェイスの紹介

メインインターフェイスで、リモコンの「リスト」ボタンを押すか、パネルの「▲」ボタンを押してプレイリストインターフェイスに入ります
[ヒント: プレイリストには最大1000曲しか追加できません]

プレイリストタイプ

現在のプレイリストをSDカードまたはUディスクに保存します。(注: この機能はまだ有効になっておらず、後でアップグレードバージョンの後でのみ有効になります。)



現在選択されているトラックを削除します。
現在選択されているトラックの位置を移動します。
現在のプレイリストのすべてのトラックを削除します

上記のインターフェイスでは、リモコンまたはパネルの「▲」「▼」キーを使用して、対応するトラックを前後に選択し、リモコンの「OK」キーまたはパネルの「▶||」キーを押してプレイする。(ヒント: リモコンまたはパネルの「▲」および「▼」キーを1秒間長押しすると、自動的にかつ継続的にスライドします)。

プレイリストタイプの紹介

デフォルトのプレイリスト——マシンは、SDカードまたはUディスク内のすべての曲によって生成されたデフォルトのプレイリストを自動的に検索します。

フォルダプレイリスト——ユーザーは、フォルダーで1つのトラックを選択して再生し、フォルダー内のすべてのトラックをフォルダーのプレイリストに同時に追加します。




お気に入りのプレイリスト——ユーザーがフォルダ内気に入りのリストにお好きなトラックを追加したときに生成されるお気に入りのプレイリスト。

システム設定インターフェースのご紹介

メイン画面で、リモコンの「SET」ボタンを押して、システム設定画面に入ります。



この画面では、リモコンまたはパネルの"▲"と"▼"ボタンで対応する機能を前後に選択し、リモコンの「OK」ボタンまたはパネルの"▶||"ボタンを押して対応する機能にアクセスします。

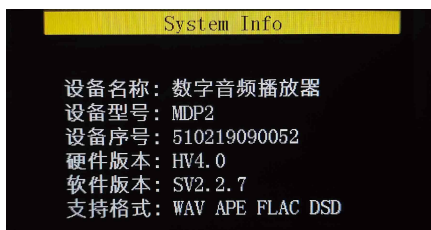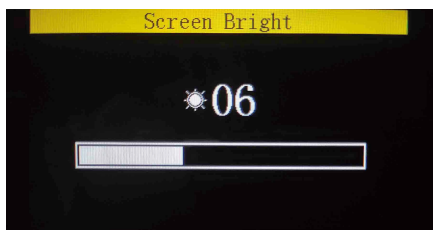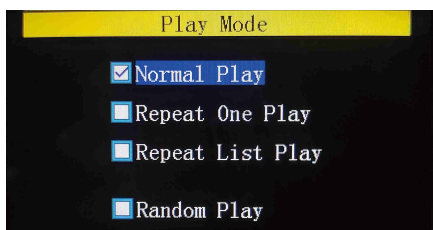

これらの画面で、リモコンのボタン"⏮"またはパネルのボタン"◀◀"でシステム設定メニューに戻ることができます。

上記のすべての画面で、リモコンの「HOME」ボタンを使ってメイン画面に戻ることができます。

よくある問題に対する解決策

- 1.再生時に音切れやノイズ、音鳴りがある場合は、UディスクやSDカードを再フォーマットしてください。
- 2.96K、24bit、192K、24bitなどのハイビットストリームオーディオを再生すると、音が割れて聞こえる場合では、UディスクやSDカードの転送速度が十分かどうかをご確認ください。例えば、Uディスクを標準2.0のものに交換したり、SDカードをC4レベル以上のものに交換したりします。

musician